





# Goldeye

### G-034 SWIR TEC2

- GigE Vision InGaAs camera
- VGA resolution
- · Power over Ethernet
- Strong sensor cooling
- High dynamic range
- · Low noise
- Fast frame rates: 303 fps

### See the invisible

Short-wave infrared (SWIR) cameras with InGaAs sensor technology

Goldeye G-034 SWIR TEC2 with FPA 636  $\times$  508 | 15  $\mu$ m | InGaAs runs 303 frames per second at 0.3 MP resolution.

Goldeye cameras are equipped with InGaAs sensor technology making them sensitive in the short wave infrared spectrum ranging from 900 nm to 1,700 nm. Some models have extended sensitivity in the visible spectrum down to 400 nm or up to 2200 nm. All Goldeye SWIR cameras can be operated at very high frame rates and capture outstanding low-noise images. They are the perfect choice for industrial and scientific applications beyond the visible spectrum. All Goldeye models are available with either a Camera Link or a GigE Vision interface.

Easy software integration with Vimba / Vimba X and compatibility to the most popular third party image-processing libraries.

Alternatively, AcquireControl provides extensive image analysis functions, such as:

- Pseudo color LUT with several color profiles
- Auto contrast
- Auto brightness
- Analyze multiple regions (rectangular, circle) within the image
- · Real-time statistics and histogram display

The Modular Concept offers various options for lens mount, housing variants, optical filters, case design, and more. See the Customization and OEM Solutions webpage for additional options.



Chasifications	
Specifications	
Interface	IEEE 802.3 1000BASE-T, IEEE 802.3af (PoE)
Resolution	636 (H) × 508 (V)
Spectral range	900 nm to 1700 nm
Sensor	FPA 636 × 508   15 μm   InGaAs
Sensor type	InGaAs
Sensor size	12.2 mm (diagonal)
Pixel size	15 μm × 15 μm
Lens mounts (available)	C-Mount
Max. frame rate at full resolution	303 fps
ADC	14 Bit
Image buffer (RAM)	256 MByte
Cooling temperature	-30 °C (default and calibrated)   -20 °C, -10 °C (calibrated)   0 °C (uncalibrated)   User configurable
Dark current	26 ke <sup>-</sup> /s (at -30 °C FPA temperature)
Temporal dark noise	390 e (Gain0), 53 e (Gain1), 32 e (Gain2)
Saturation capacity	1.2 Me <sup>-</sup> (Gain0), 84.8 ke <sup>-</sup> (Gain1), 25 ke <sup>-</sup> (Gain2)

Output	
Bit depth	8-bit to 16-bit
Monochrome pixel formats	Mono8, Mono10, Mono10p, Mono10Packed, Mono12, Mono12p, Mono12Packed, Mono14, Mono16

69 dB (Gain0), 64 dB (Gain1), 59 dB (Gain2)

General purpose inputs/outputs (GPIOs)	
TTL I/Os	LVTTL I/Os: 1 input, 1 output
Opto-isolated I/Os	1 Input, 2 Outputs

RS232 115 200 Baud, 8N1 (adjustable)

Operating conditions/dimensions	
Operating temperature	-20 °C to +55 °C (housing)
Power requirements (DC)	10.8 V DC to 30.0 V or via PoE

Dynamic range



Power consumption 21 W (at 12 VDC), <23 W (PoE)

Mass 740 g (with C-Mount adapter)

Body dimensions (L  $\times$  W  $\times$  H in mm) 90  $\times$  80  $\times$  80

# Quantum efficiency

# Goldeye G/CL-034 TEC2 Absolute QE 90 80 70 91 40 20 10

1300

Wavelength [nm]

1400

1500

1600

1700

1800

800

900

1000

1100

1200



## Features

### Image control: Auto

- Auto contrast
- Auto exposure

### Image control: Other

- Background correction
- Binning
- DPC (defect pixel correction)
- LUT (look up table)
- NUC (non-uniformity correction)
- ROI (region of interest)

### Camera control


- Acquisition frame rate
- Bandwidth control
- Event channel
- Firmware update in the field
- I/O and trigger control
- Image chunk data
- Stream hold
- User sets

### Sensor temperature control

- Temperature management by TEC
- Temperature status indicator



# Technical drawing

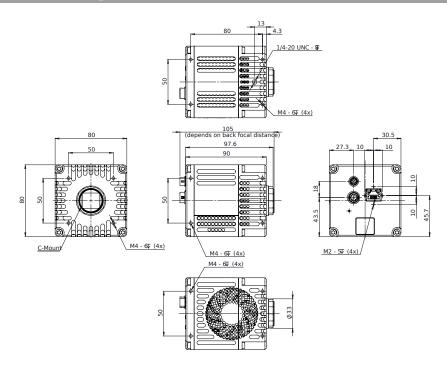

# Applications

Goldeye cameras are very sensitive in the SWIR spectrum. They can be used in an extended operating temperature range. Thanks to temperature stabilization and integrated image correction, Goldeye cameras achieve an outstanding image quality with little noise and a high dynamic range. They are well-suited for many typical SWIR applications in various industry branches:

- Semiconductor failure analysis
- Solar cell inspection
- Non-invasive in-vivo imaging (NIR-II)
- Fluorescence imaging
- Spectroscopy
- Microscopy
- Astronomy

**White Paper** To learn more about typical application fields for SWIR cameras, download our White Paper: Seeing beyond the visible – short-wave infrared (SWIR) cameras offer new application fields in machine vision